

Designed to be heard.
Made to be seen.

SUONO

QUICK START GUIDE

QUICK CHECK

No Wi-Fi	Check the network, password and router range.
No sound from Passive	Check the cable. Plus goes to plus, minus to minus.
Bluetooth issue	Remove ONO from your saved devices and pair again.

SUPPORT

For product information, setup help and support, visit **suono.nl**.

CARE

ONO is cast by hand from concrete. Small differences in colour, texture and surface are natural to the material and make every speaker one of a kind. Clean with a soft, dry cloth. Never use water, solvents or abrasives.

SAFETY

Place ONO on a stable, level surface.
Keep the speaker dry and away from excessive heat.
Keep the bass reflex opening unobstructed.
Disconnect the power before cleaning.
Do not open or modify the internal electronics.



ONO

SUONO

suono.nl

Setup, connection and wireless playback

EN

Connect

ONO Active powers both speakers. Connect ONO Passive to it with the speaker cable.



ONO ACTIVE

ONO PASSIVE



PLUS TO PLUS, MINUS TO MINUS

STATUS LIGHT

○ ○ ○ ○ ○ ○ ○	White, blinking fast	Wi-Fi setup is starting. Release RESET and wait until the light blinks slowly.
○ ○ ○	White, blinking slowly	ONO is ready for Wi-Fi setup. Open the 4STREAM app and tap Add Device.
◯	White, solid	Connected to Wi-Fi. ONO is ready to play.
■ ■ ■	Blue, blinking	Bluetooth is searching. Choose ONO in your Bluetooth settings.
■ ■ ■ ■ ■	Blue, solid	Connected via Bluetooth. Hold RESET for 5 seconds to end the connection.

Get started

- Place**
Put both speakers on a stable surface. Leave space around the bass reflex opening and keep them away from water and heat.
- Connect**
Switch off ONO Active. Connect the cable **plus to plus** and **minus to minus**. Switch ONO Active back on.
- Join Wi-Fi**
Connect ONO Active to power. Open the 4STREAM app and tap **Add Device**. Choose your Wi-Fi network, enter the password and wait until ONO appears in the app.
A 2.4 GHz network is recommended for first-time setup.
- Play**
Spotify Connect Tap the devices icon in Spotify and choose ONO.
AirPlay Choose ONO in the AirPlay menu.
Bluetooth Switch ONO to Bluetooth, then choose ONO in your Bluetooth settings.
Switch mode. Press the button with the status light to switch between Wi-Fi and Bluetooth. You can also switch in the 4STREAM app.
- Volume and reset**
Turn the control to the right for louder and to the left for softer.
Reset Wi-Fi. Hold RESET for about 5 seconds while ONO is on. Or disconnect the power, hold RESET while reconnecting and release when the light starts blinking. The white light first blinks fast, then slowly. ONO is now ready for setup.